




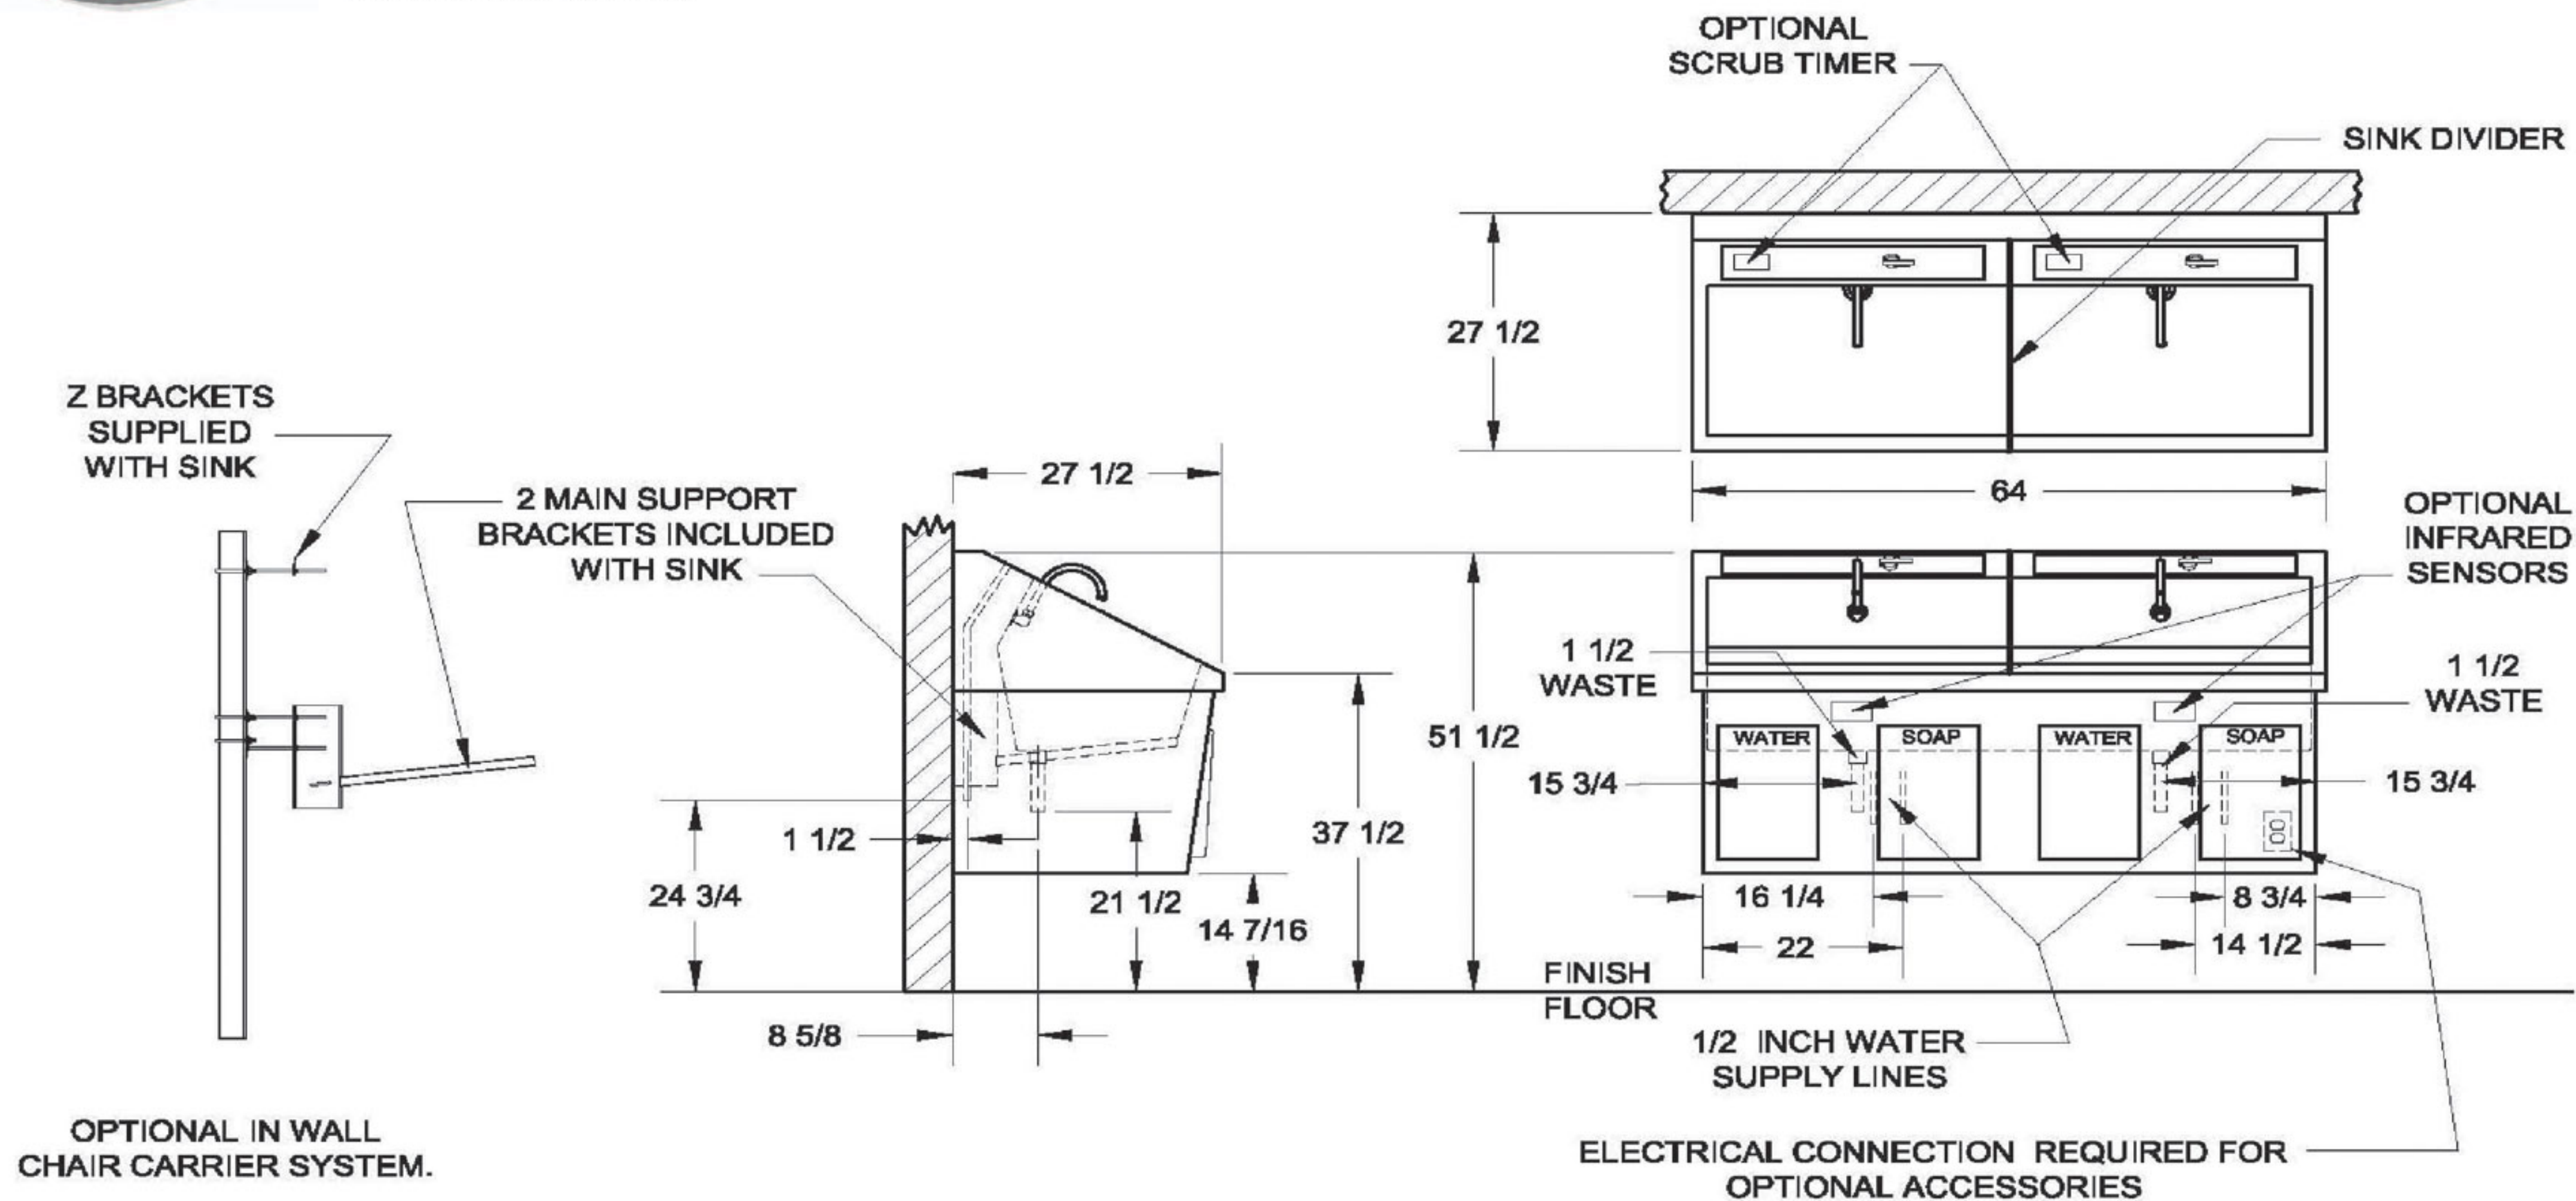

FUTURE HEALTH
CONCEPTS, INC
1211 E. 30TH ST
SANFORD, FL 32773
(800) 282-8644
(407) 322-3672 DIRECT
(407) 322-3871 FAX
WWW.FHCUSA.COM

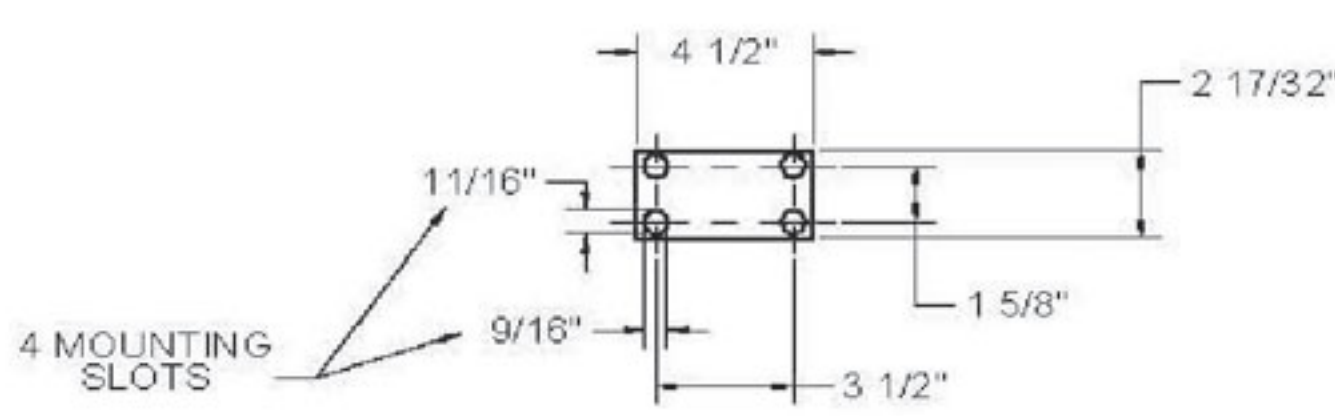

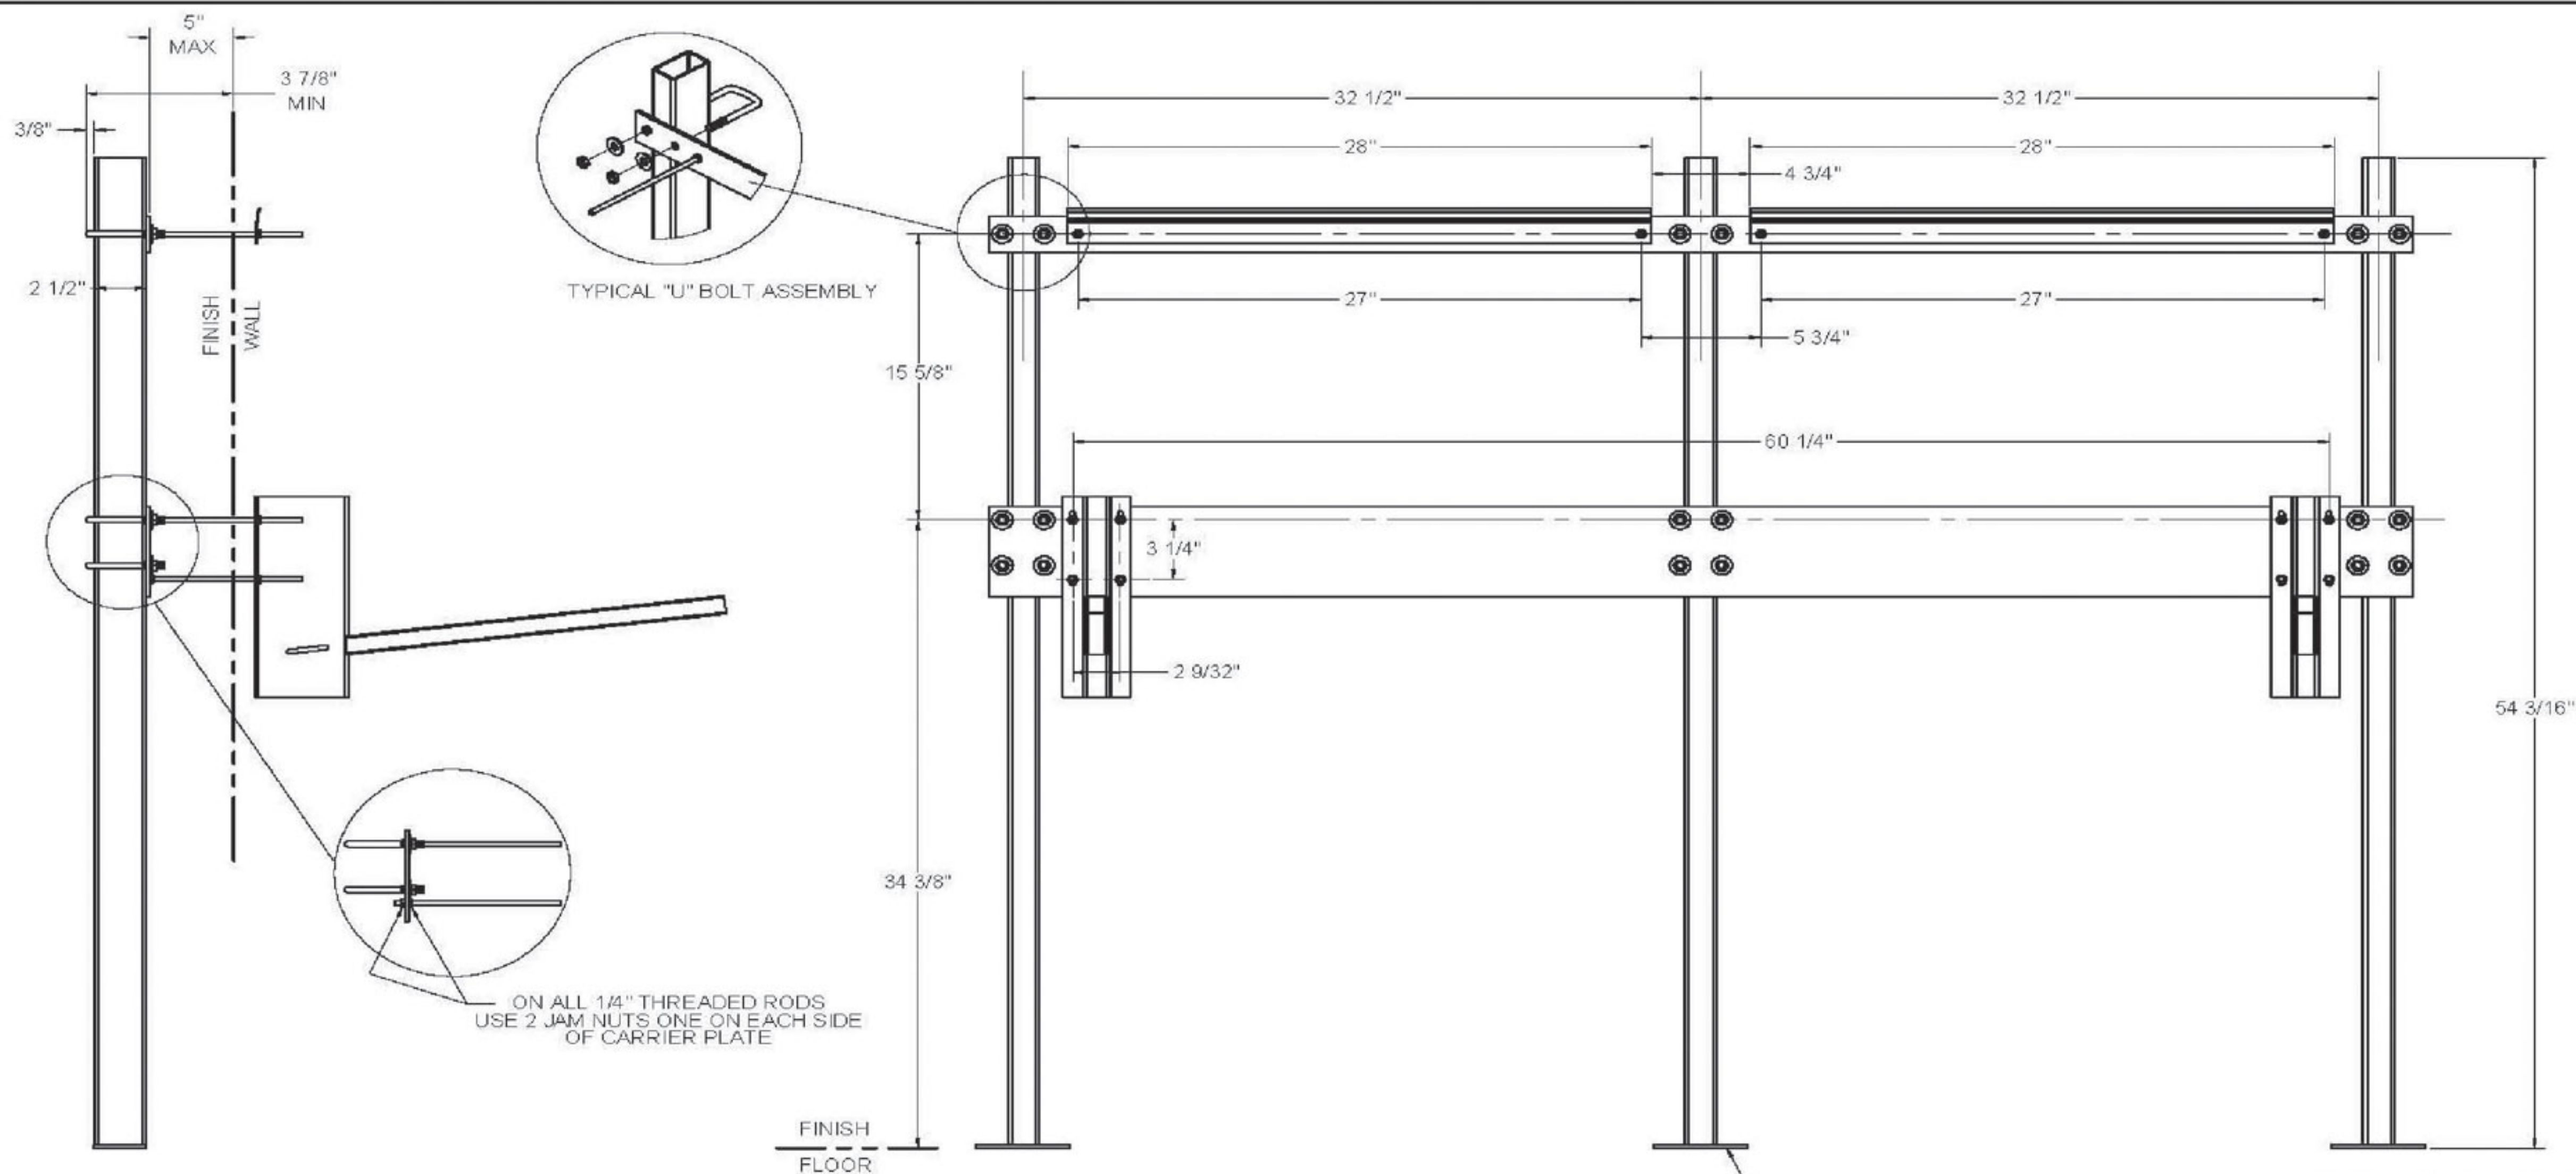


FUTURE HEALTH
CONCEPTS, INC
1211 E. 30TH ST
SANFORD, FL 32773
(800) 282-8644
(407) 322-3672 DIRECT
(407) 322-3871 FAX
WWW.FHCUSA.COM

FOR REPAIR TO AND MEDICAL NOT TO BE USED FOR OTHER PURPOSES WITHOUT THE WRITTEN PERMISSION OF FHC MEDICAL




FUTURE HEALTH
CONCEPTS, INC
1211 E. 30TH ST
SANFORD, FL 32773
(800) 282-8644
(407) 322-3672 DIRECT
(407) 322-3871 FAX
WWW.FHCUSA.COM

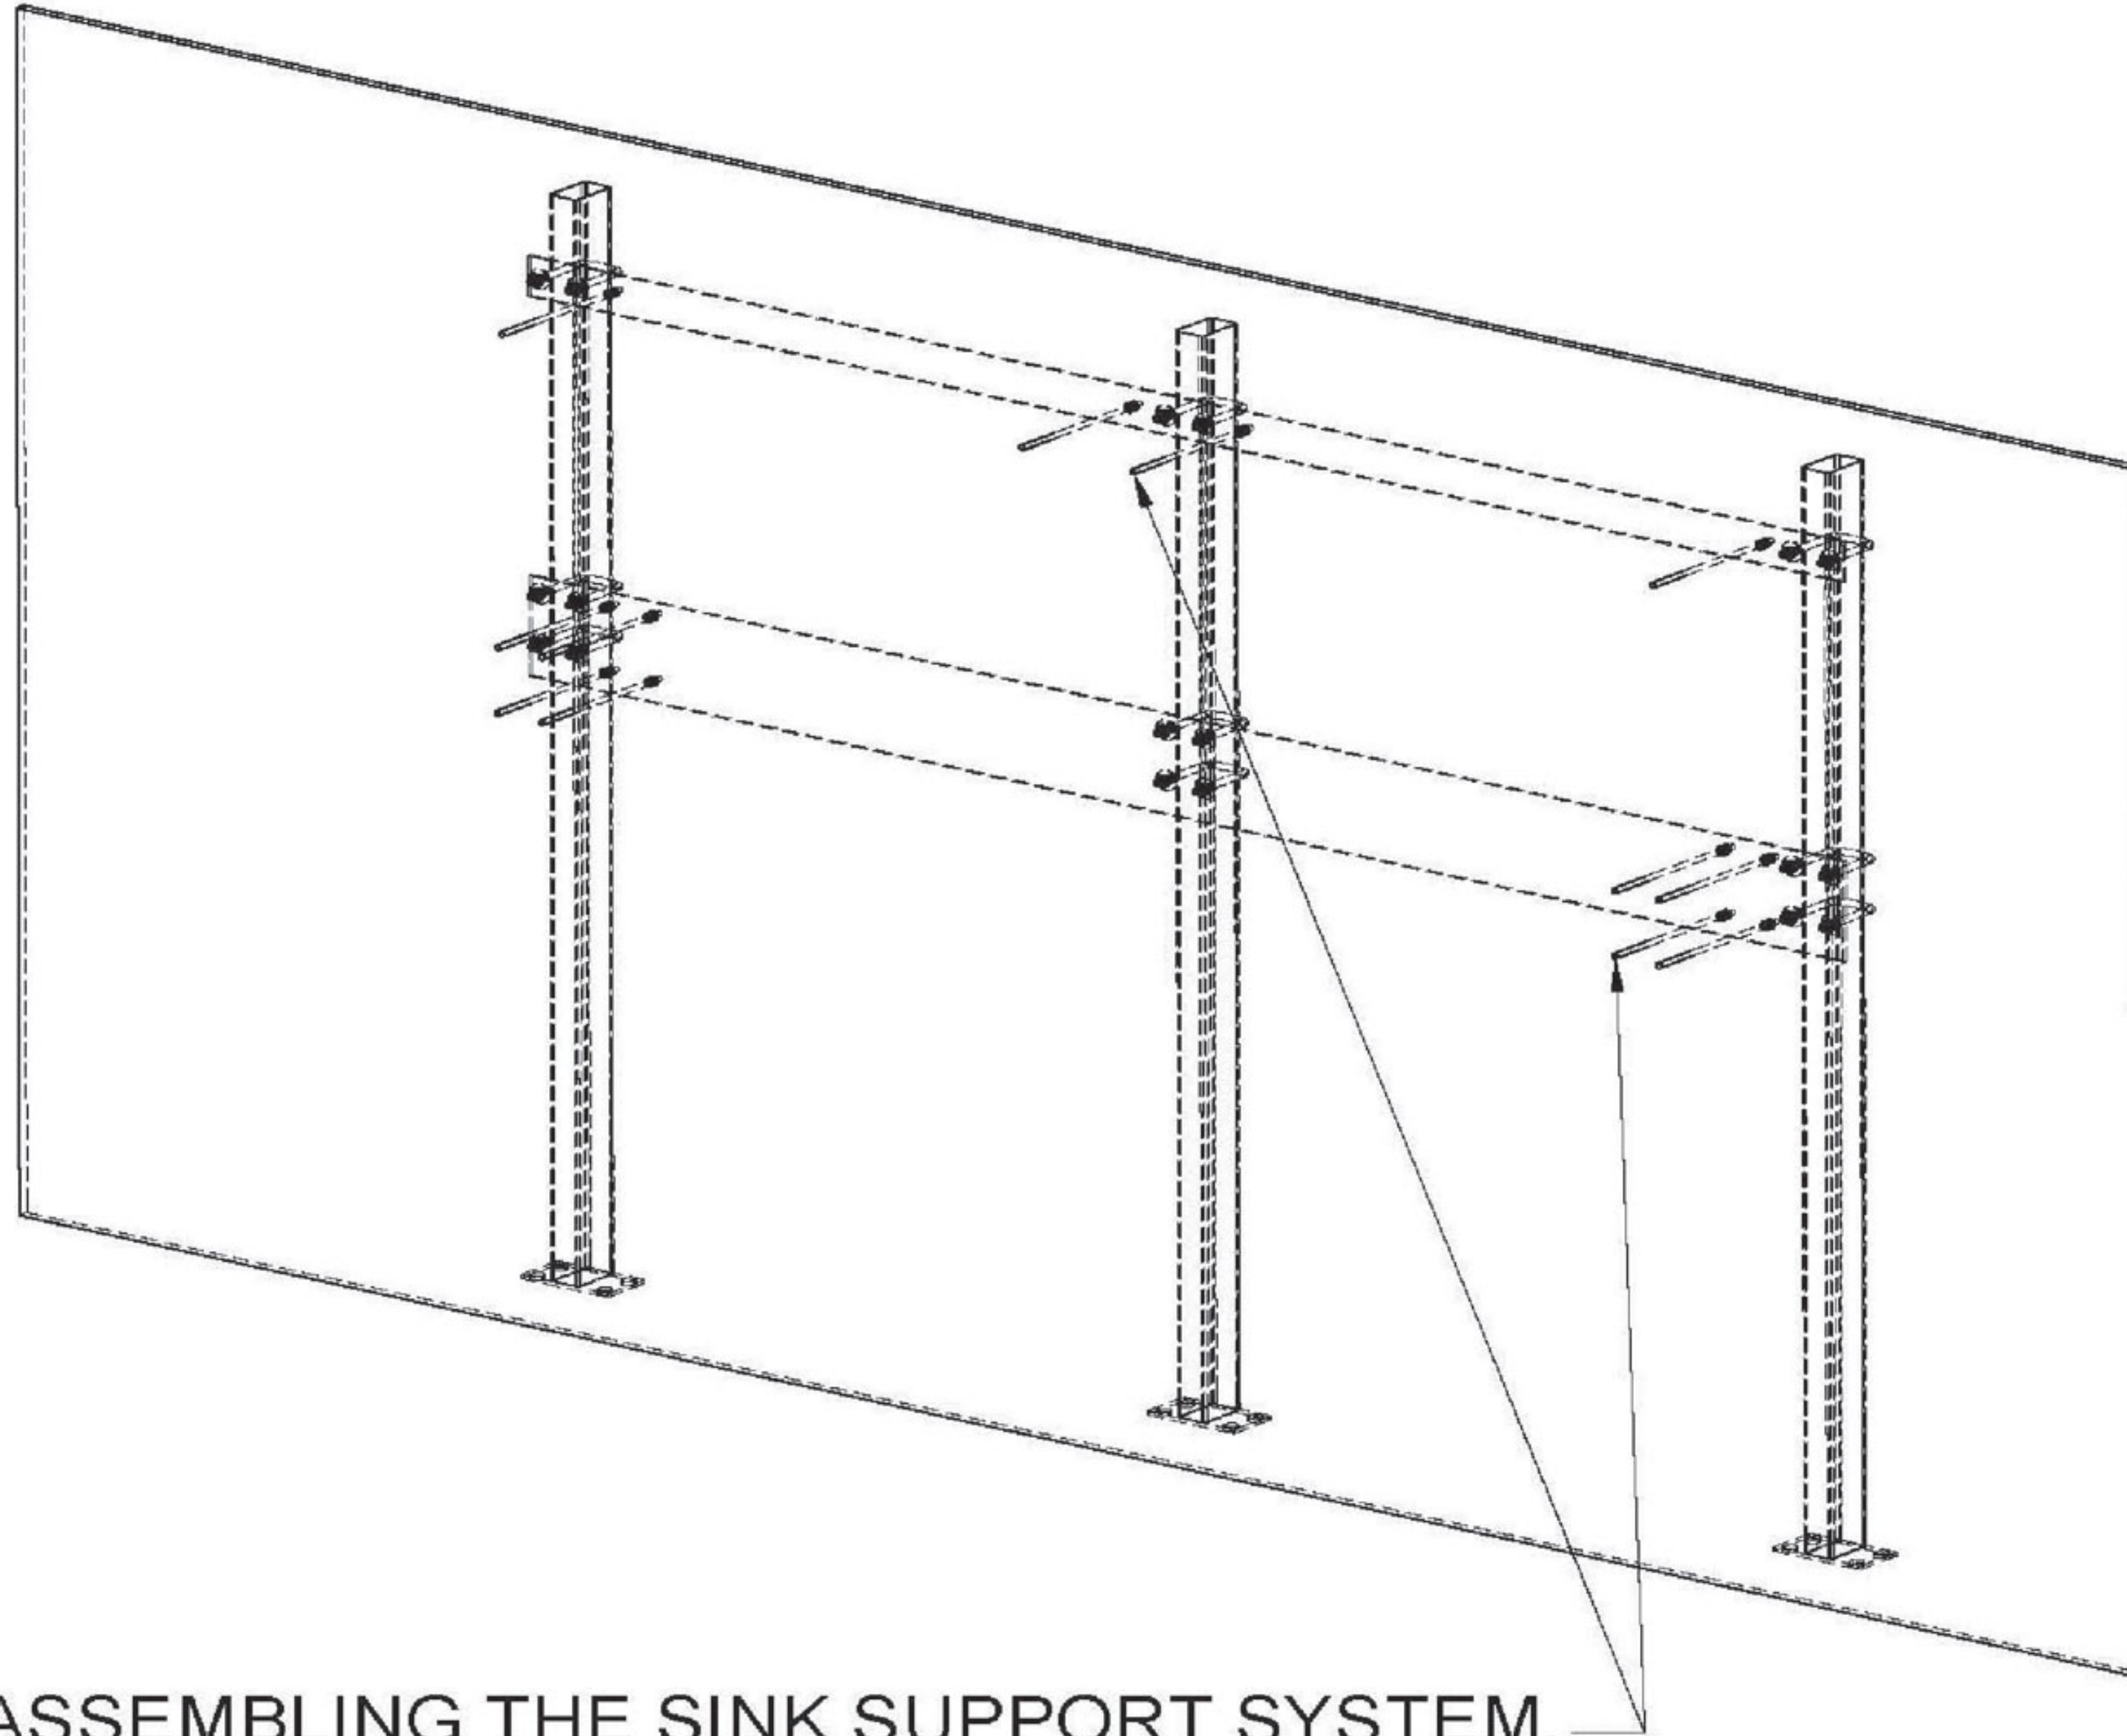

AFTER ASSEMBLING THE SINK SUPPORT SYSTEM,
BUILD A WALL TO INCLOSE THE SYSTEM. THE
1/4 INCH STUDS MUST PROTRUDE PAST THE
FINISH WALL A MINIMUM OF 1 INCH



FUTURE HEALTH
CONCEPTS, INC
1211 E. 30TH ST
SANFORD, FL 32773
(800) 282-8644
(407) 322-3672 DIRECT
(407) 322-3871 FAX
WWW.FHCUSA.COM

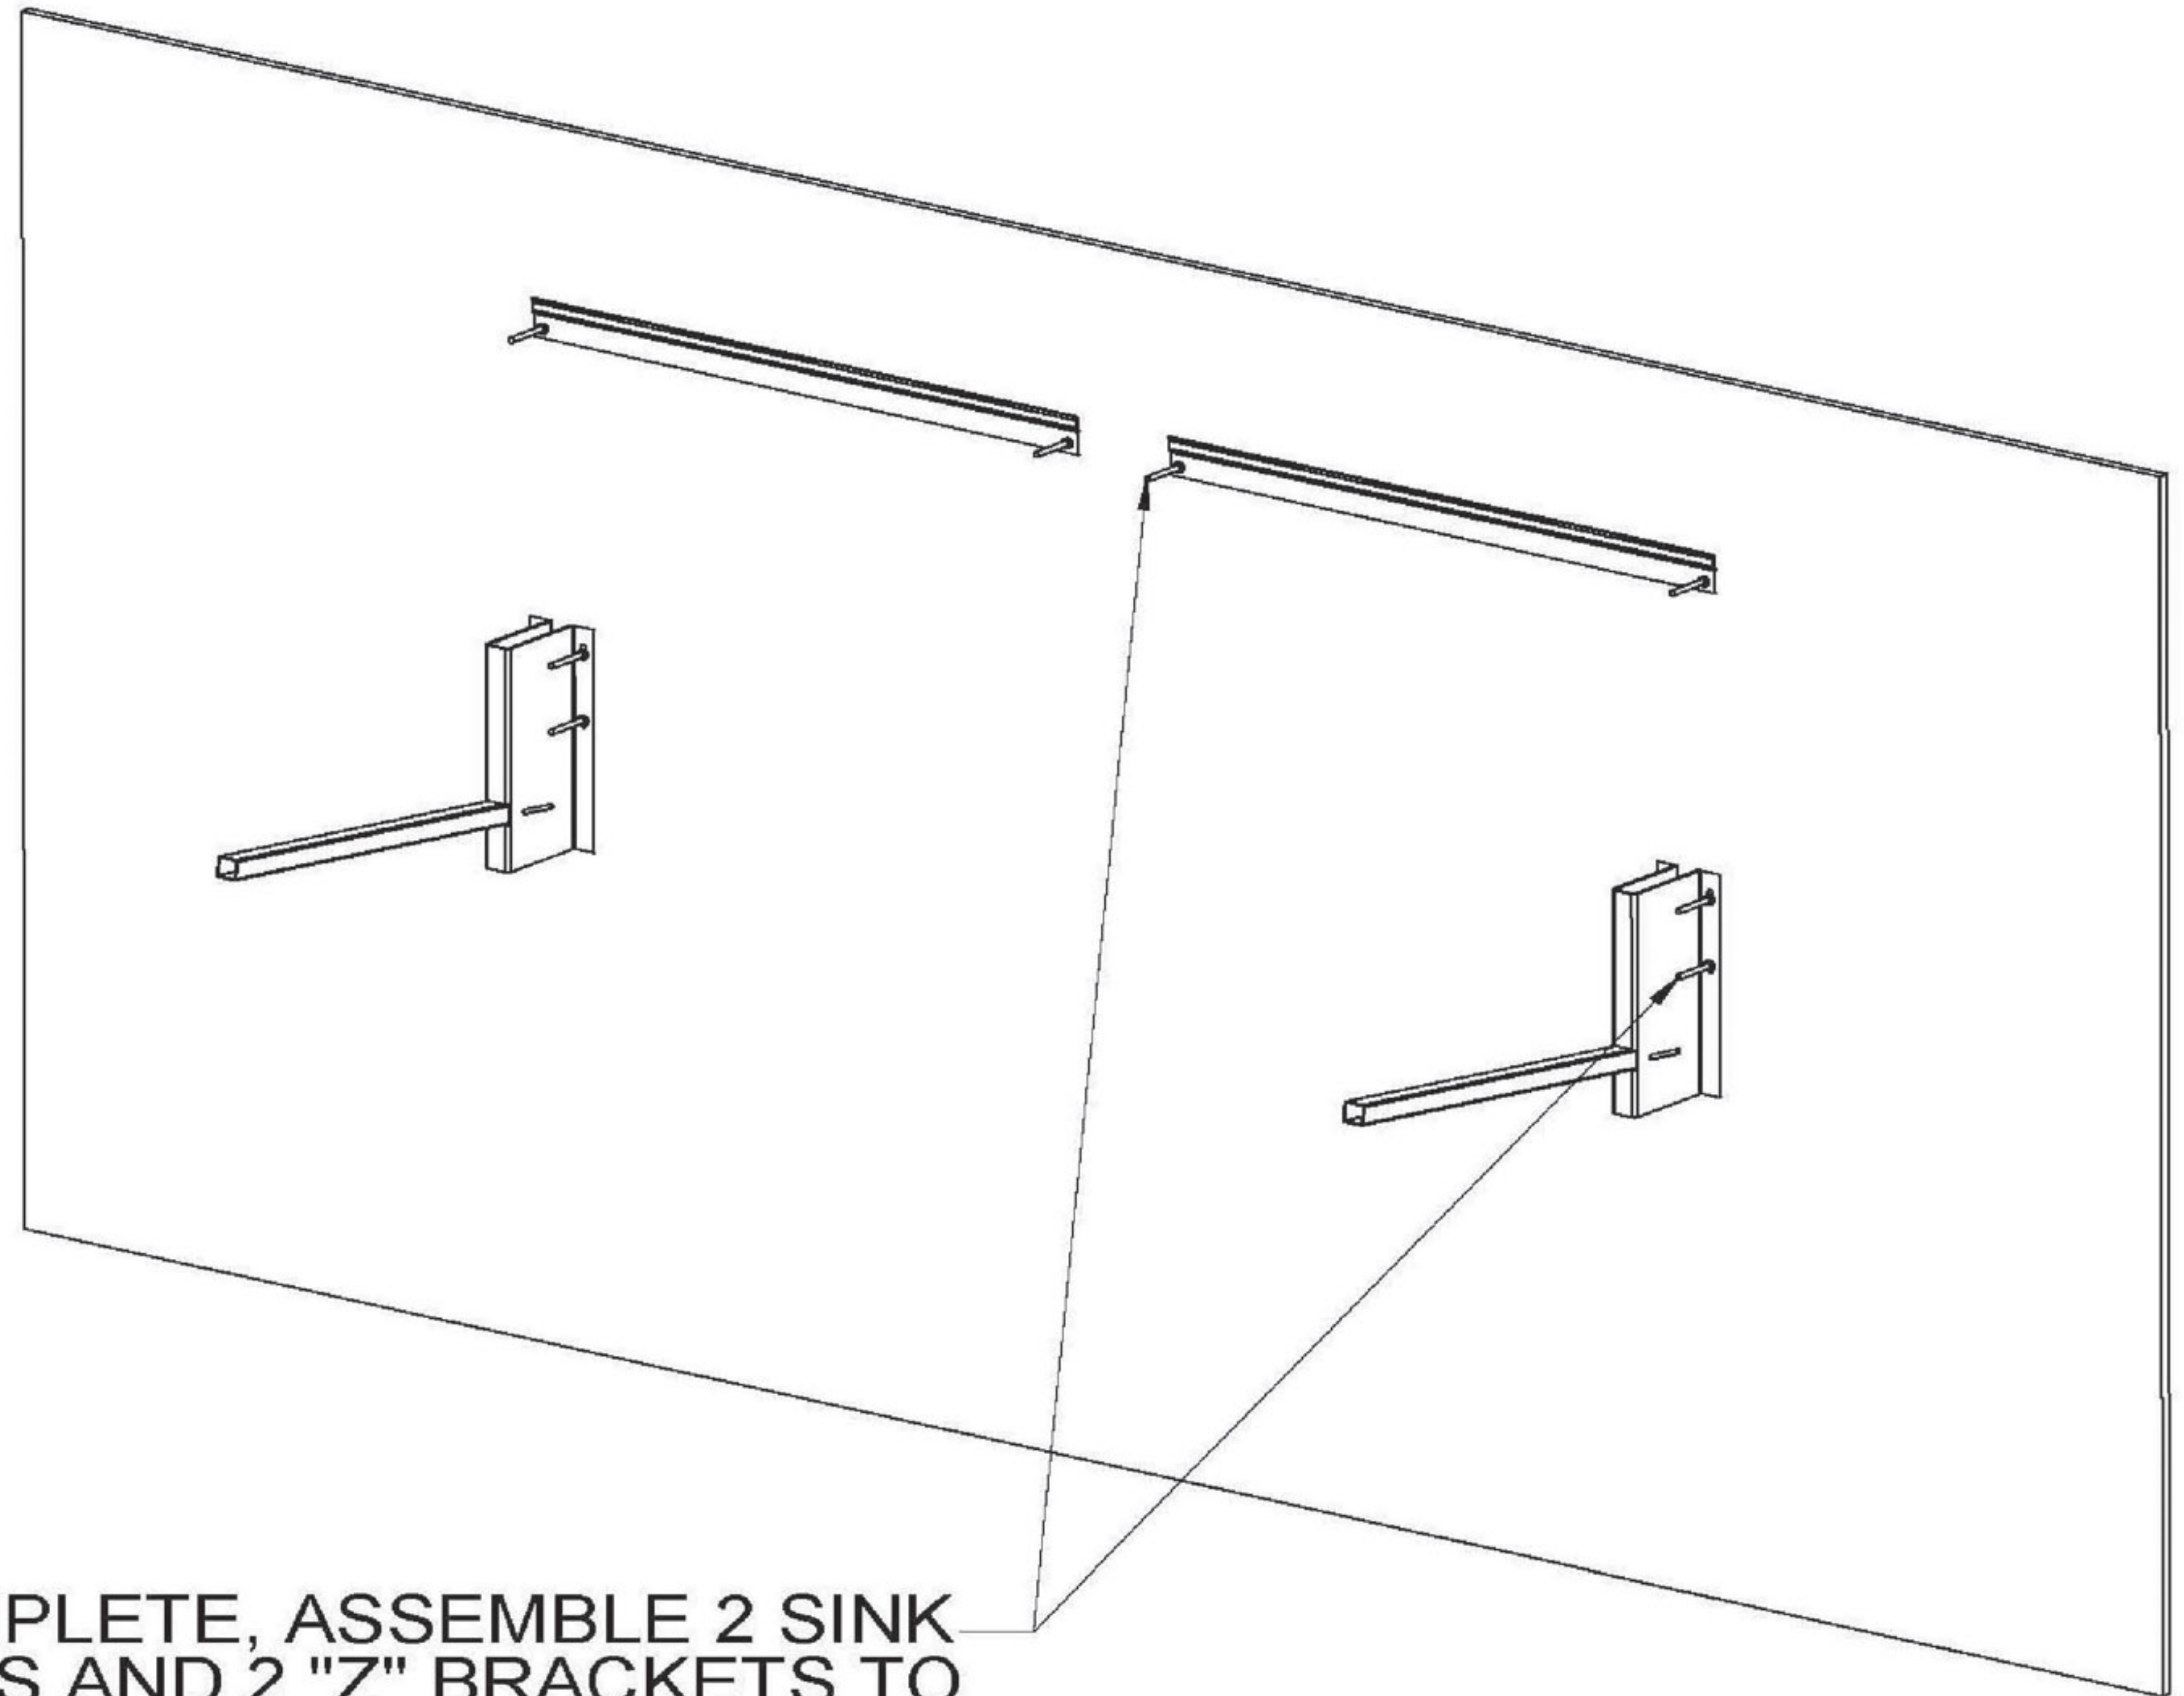

AFTER WALL IS COMPLETE, ASSEMBLE 2 SINK
SUPPORT BRACKETS AND 2 "Z" BRACKETS TO
PROTRUDING STUDS WITH HEX NUTS